


TOOLS REQUIRED:

- 4 mm Hex Wrench
- 8 mm Open Ended Wrench
- Torque Wrench with 4 mm Hex Tip



HARDWARE

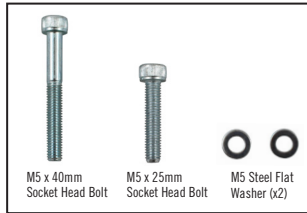

COMPATIBILITY:

This product is only compatible with **DELTA 400, 425 and 430** models. Please do not use on **DELTA 100, 105, 200, 225, or SONIC/MU/XL** models. In addition it is not recommended to mount a **MULTI-STRIKE REPAIR HOLDER** with the **AERO POUCH**. The added weight could cause damage to the mount and void your warranty.

Note: For **DELTA 300** models, please view the instructions online for the recommended hardware and mounting instructions.

IMPORTANT:

PLEASE COMPLETELY UNDERSTAND ALL USER INSTRUCTIONS AND SAFETY INFORMATION BEFORE USING THIS PRODUCT. AS WITH ANY HIGH TECH PRODUCT YOU WILL NEED TO ROUTINELY CHECK FOR LOOSE HARDWARE, CRACKS OR OTHER DAMAGE AND REPLACE ITEMS AS NECESSARY. DO NOT USE PRODUCT IF ANY OF THESE CONDITIONS EXIST.

ESSENTIAL TIPS:

ALWAYS TWIST THE BOTTLE AS YOU PULL IT FROM THE CAGE. Pulling the bottle straight out or to the side will increase the force needed.

- ADJUST the angle of your **DELTA 400/425/430** for easiest bottle withdrawal.
- TO LOOSEN THE BOTTLE GRIP, LEAVE A FULL BOTTLE IN THE CAGE OVERNIGHT.**
- Do not overstuff the bag - this can force the bag in the way of the bottle and make it difficult to fit.
- DO NOT use oversize bottles larger than 75 mm in diameter.



INSTALLATION: DELTA 400/425/430

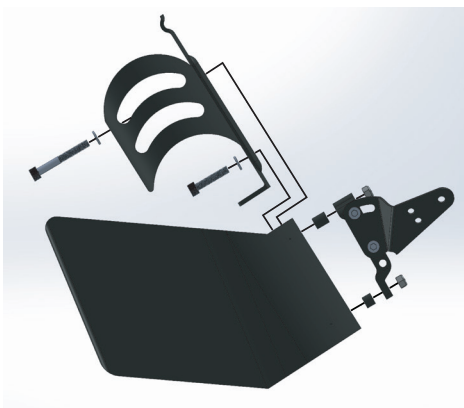


Figure A

The stock bolts that come on the **DELTA 400/425/430** will not be long enough to accommodate the **AERO POUCH 300**. There are new M5 x 25 mm and M5 x 40 mm Socket Head Bolts included in your pouch packaging.

1. Using the 4 mm Hex wrench and the 8 mm Open-ended wrench, remove the M5 x 35 mm and the M5 x 18 mm Socket Head Bolts holding the cage to the **DELTA 400/425 /430** mount.
2. Place the cage inside the **AERO POUCH 300**. Place an M5 Steel Flat Washer on each of the bolts and then slide the M5 x 40 mm Socket Head Bolt through the top hole of the cage and the pouch, and the M5 x 25 mm Socket Head Bolt through the bottom cage hole and the pouch. See **Figure A**.
3. Replace any spacers that were beneath the cage between the pouch and the **DELTA** mount.
4. Loosely install back on to the **DELTA** mount, and add the M5 Nylon Insert Lock Nuts.
5. Using the Torque wrench, torque the bottom bolt to 2.3 Nm (20 in lbs). Hand tighten the top bolt with the hex wrench as much as possible.

WARRANTY:

Limited 3 Year. See website for details.