


Bag Installation:

AERO MINI BAG for use with the AERO CARBON WING


Install AERO MINI BAG

PARTS REQUIRED


Parts Included with Aero Carbon Wing

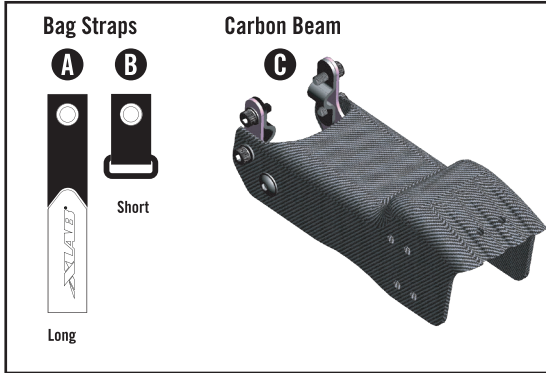

Parts Included with Aero Mini Bag

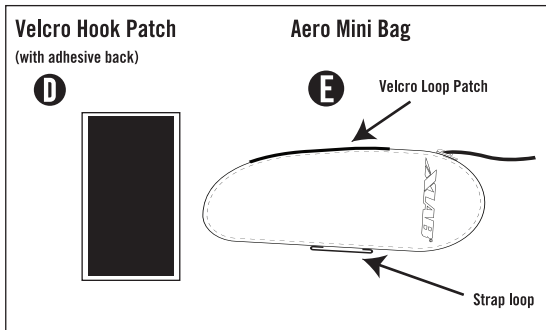


Additional Items Required

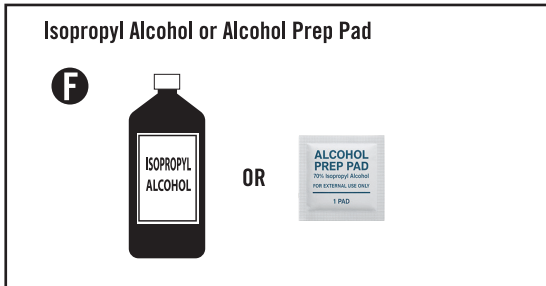

STEP 1: PREP CARBON BEAM FOR VELCRO


1a: CLEAN CARBON BEAM

Turn Carbon Beam (C) over and clean the area marked in red with the Isopropyl Alcohol or Alcohol Prep Pad (F). Ensure that the surface is clean and free of grease, dust and other particles.

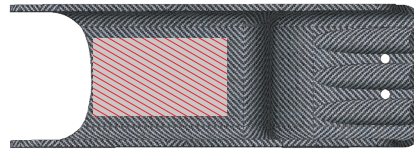


1b: INSTALL VELCRO

Peel **Velcro Hook Patch (D)** from adhesive backing. Position the sticky side over the prepared surface and press down firmly. Rub along the length of the Velcro to ensure full contact with the beam. Allow 48 hours for full adhesion before installing the **Aero Mini Bag (E)**. It is advised to add around 110g (4 oz) of weight (like a multi-tool), onto the velcro patch and let sit for a period of 48 hours to ensure full contact of the Velcro adhesive to the beam.

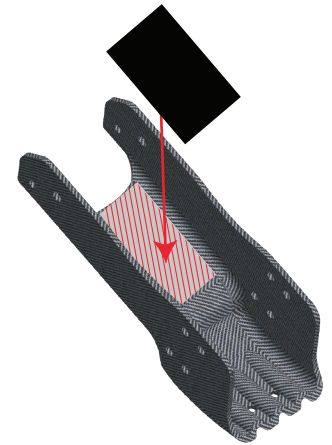

1c: INSTALL CAGE ARMS AND BAG STRAPS

Install left side cage arm and bag strap in the order shown below. Repeat for right side.

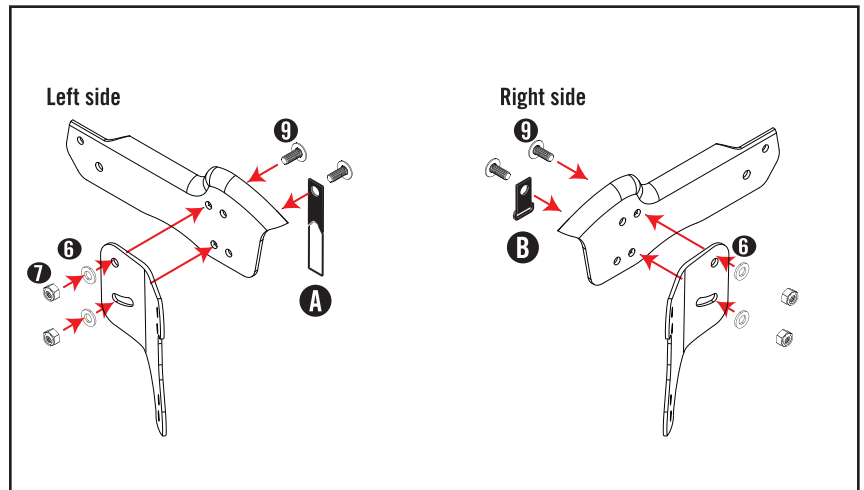

WARRANTY

AERO MINI BAG -Gen 2 - 3 Year Limited

See Website for Details

www.xlab-usa.com

Rev 10.25

Bag Installation:

AERO MINI BAG for use with the AERO CARBON WING


STEP 2: INSTALL BAG

PRO TIP: It is recommended that you first fill your bag with your gear before installing it to the Aero Carbon Wing.

2a: POSITION BAG

Position the **Aero Mini Bag** underneath and in-line with the ACW beam.

IMPORTANT: The back of the bag must align with the back of the beam. The **Velcro Loop Patch** on the bag must align with the **Velcro Hook Patch** adhered to the beam.

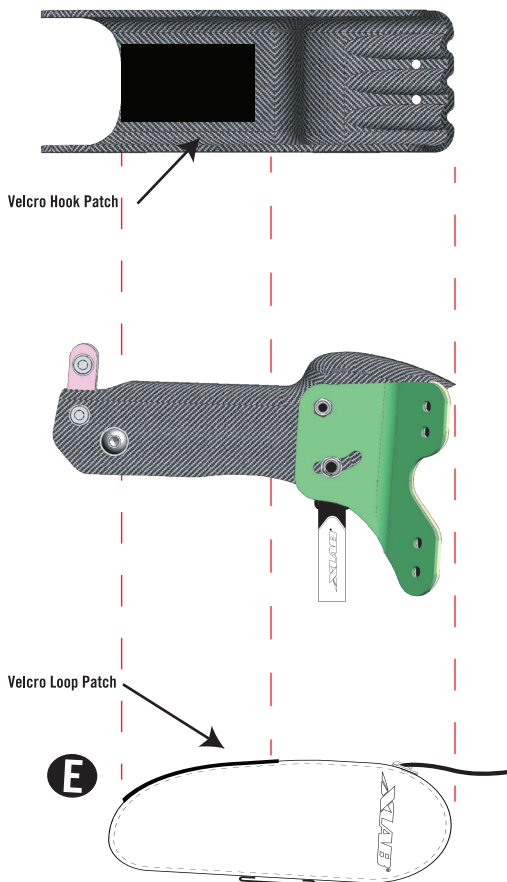


2b: INSERT BAG

Firmly press the **Aero Mini Bag** into the beam to ensure that both Velcro patches have strong engagement. Confirm proper alignment as described in Section 1a before continuing.




2c: ATTACH STRAP

Lace the longer **Bag Strap** through the **Strap Loop** on the **Aero Mini Bag**. Lace it through the buckle on the shorter Bag Strap and tighten.

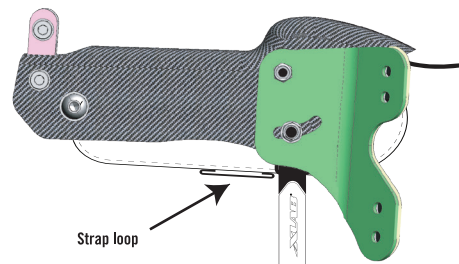

Once attached, check the bag for any movement and retighten if necessary.

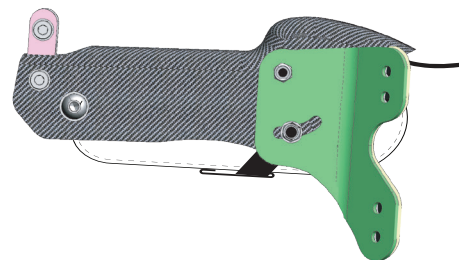

WARRANTY

AERO MINI BAG -Gen 2 - 3 Year Limited

See Website for Details

www.xlab-usa.com

Rev 10.25